


LUXE 7.0 INTERNALS ASM GUIDE

GOG PAINTBALL S.A.





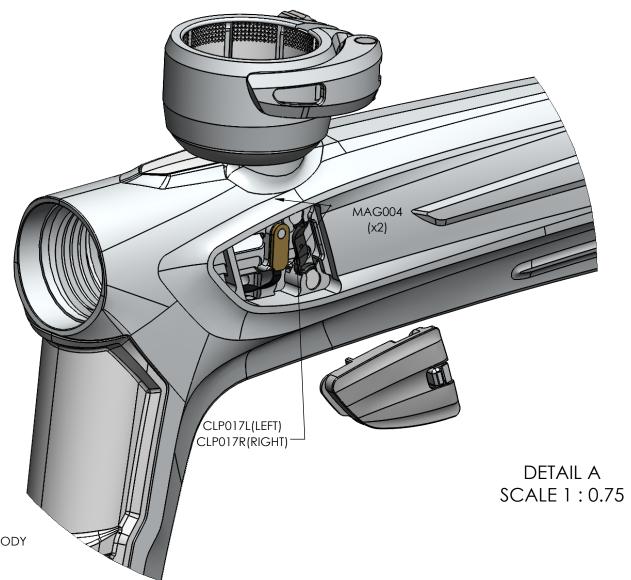


INSERT MAGG004(x2) IN TO BODY

2. LOCK MAGNETS IN WITH CLP017


3. ATTACH REST OF VSN COVER ASM TO BODY

LUXE 7.0 BODY VSN ASM

GOG PAINTBALL S.A.

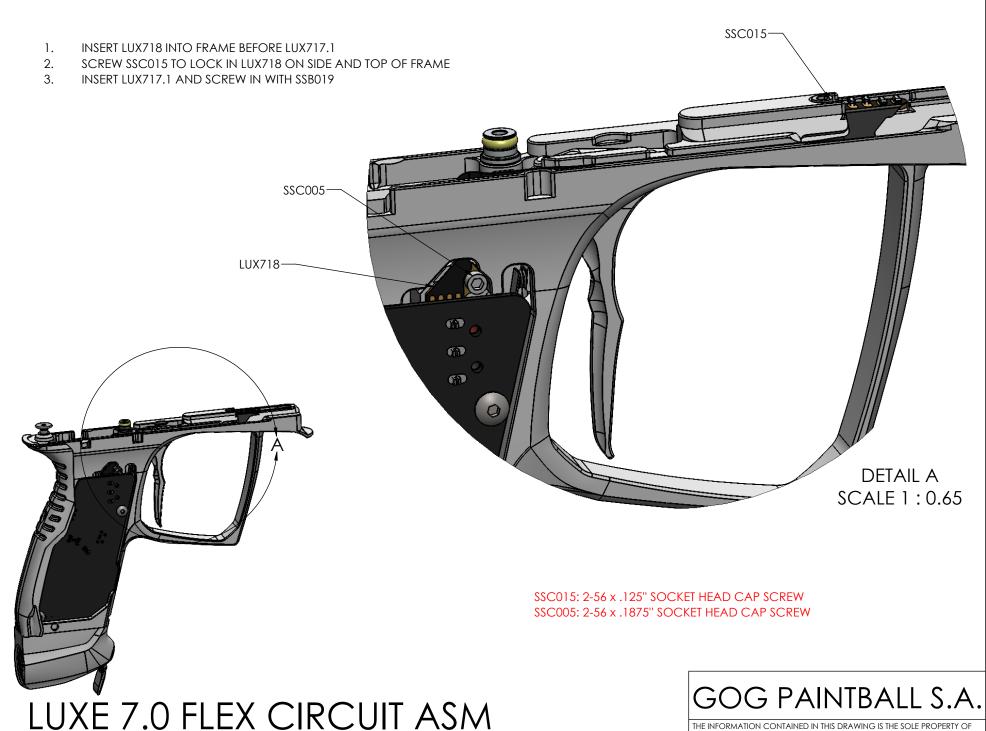


SSB019: 5-40 x .250 BUTTON CAP HEAD SCREW STAINLESS

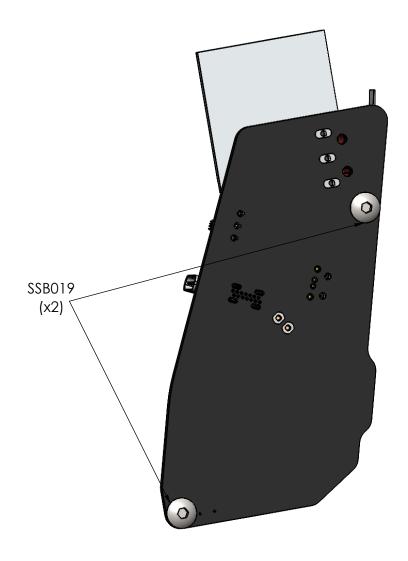

LUXE 7.0 PCB MAIN ASM

GOG PAINTBALL S.A.


SSS012:10-32 x .250 DOG POINT SET SCREW

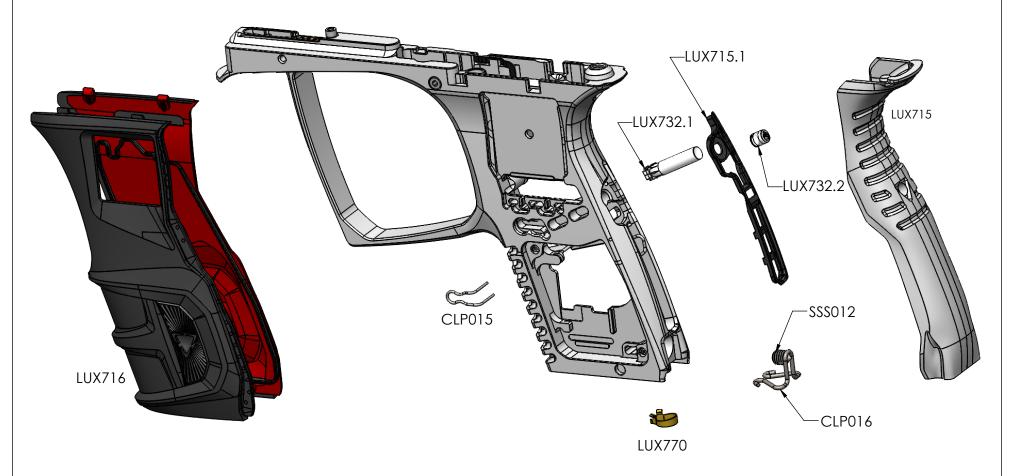

- 1. SLIDE LUX716 ON TO TRIGGER FRAME
- 2. INSERT CLP016 IN TO BOTTOM OF LUX715 AND LOCK IN WITH DOG POINT SET SCREW
- 3. INSERT LUX732.1 IN TO LUX706 AND LOCK IN WITH CLP015
- 4. INSERT LUX715.1 IN TO LUX706
- 5. INSERT LUX732.2 AND LOCK IN WITH LUX715 ASM
- 6. LOCK IN BACK STRAP ASM WITH LUX770

LUXE 7.0 GRIP BACK STRAP ASM

GOG PAINTBALL S.A.

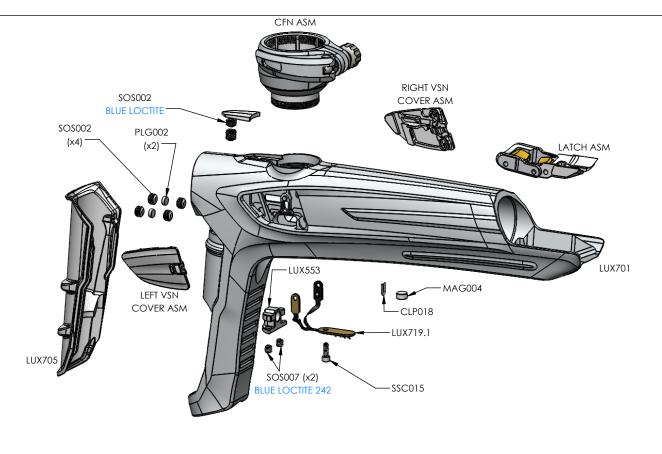



SOS002: 10 - 32 x .125 BLACK OXIDE SET SCREW SOS007: 5-44 x .125 BLACK OXIDE SET SCREW SSC015: 2-56 x .125 SHOULDER HEAD CAP SCREW


OM9015: 90 DURO MILLABLE SIZE 15 O-RING

MAG004: Ø.200 x .100 THICKNESS NEODYMIUM MAGNET

LUXE 7.0 BODY ASM


GOG PAINTBALL S.A.

MAG001: \emptyset .100 x .100 THICKNESS NEODYMIUM MAGNET BUM010: 1/16 X-PROFILE O-RING CHORD STOCK 0.070" THICK

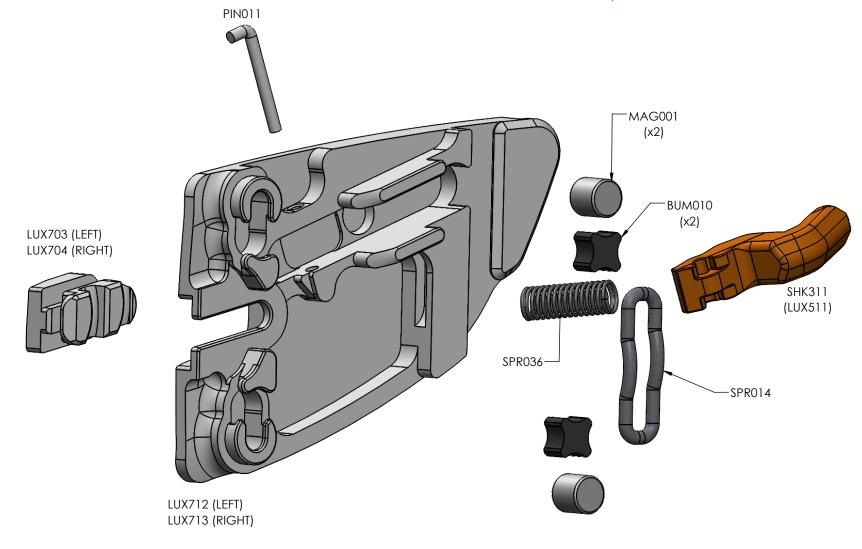


LUXE 7.0 VSN COVER ASM

GOG PAINTBALL S.A.

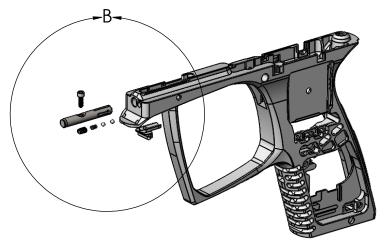


- INSERT BOTH BALOO1 AND SPROO7 IN TO SMALL BORE
- INSERT SOS003 INTO BORE AND TIGHTEN
- INSERT LUX554 IN TO TRIGGER FRAME
- LINE UP LUX752 AND SCREW IN SSC017

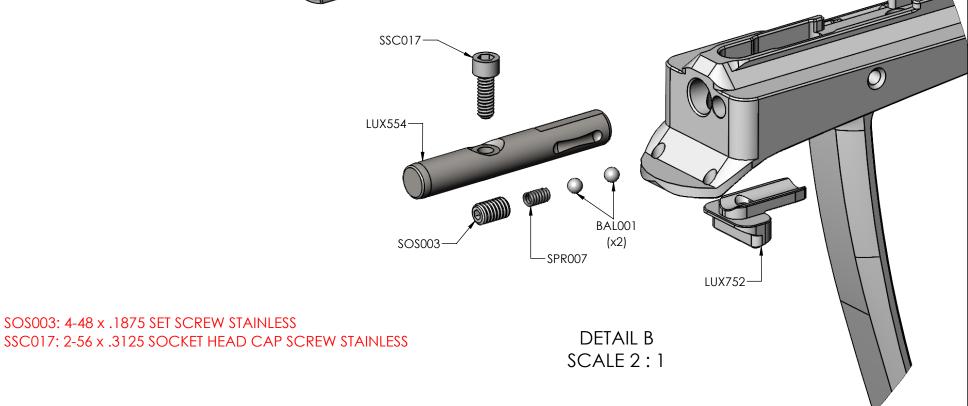

LUXE 7.0 FRONT LATCH ASM

SOS003: 4-48 x .1875 SET SCREW STAINLESS

GOG PAINTBALL S.A.

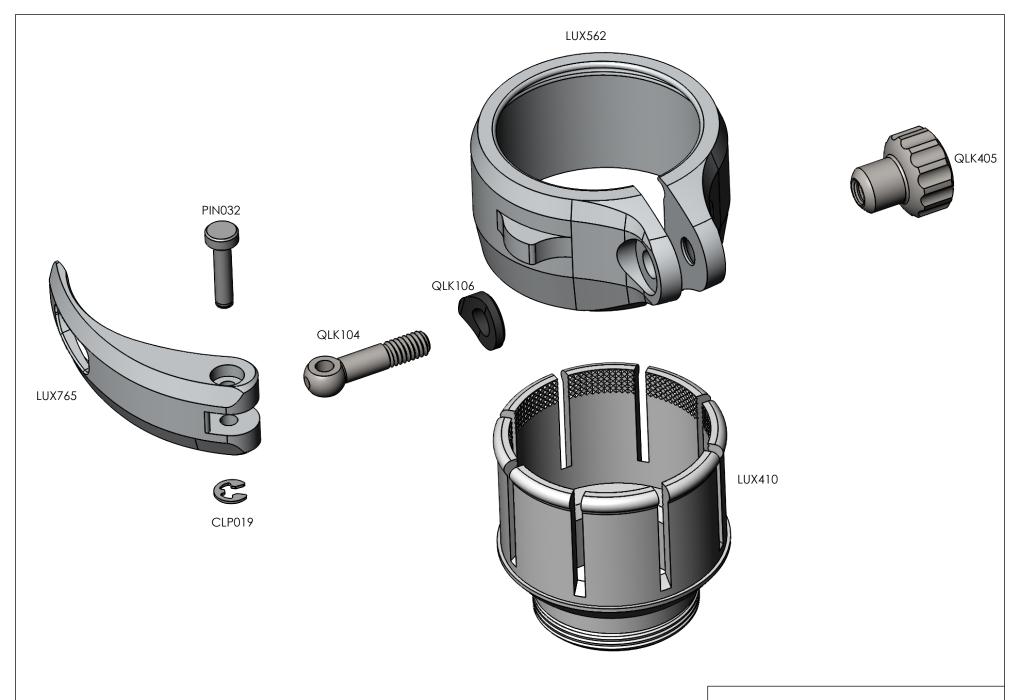

LUXE 7.0 CFN ASM

GOG PAINTBALL S.A.

